


Part No. 1877015

How to fit a G3 Canopy Cable to your Garador


Description:	G3 Cable
Models:	C Type

Fitting a New Cable


1. Tighten the two grub screws in the left-hand side spring casting.

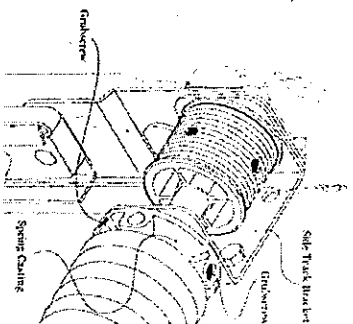

2. Thread the end of the cable into the slot of the roller bracket assembly (see item 1).

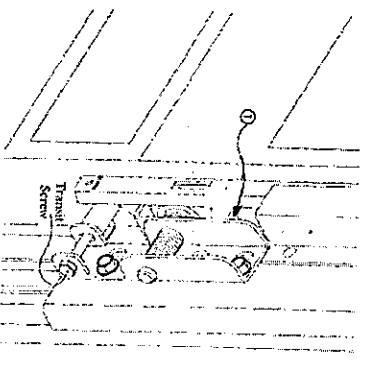

3. Undo the two grub screws in the cable drum, slide the cable drum towards the centre of the door. The cable can now be inserted into the fixing slot (Fig 7a). Rotate the drum so that the cable winds onto the rear of the drum (Fig 7b). Ensure the cable runs down the inside of the track). When the cable is taut, slide the drum to the outside and tighten both grub screws (Fig 7b). Repeat for opposite side if required.

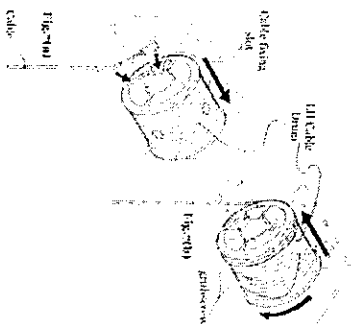

4. Undo the two grub screws that were tightened in step 1.

SH-Garador Ltd

GARADOR

Bunford Lane, Yeovil, Somerset, BA20 2YA
Tel: 01935 443722 Fax 01935 443744